
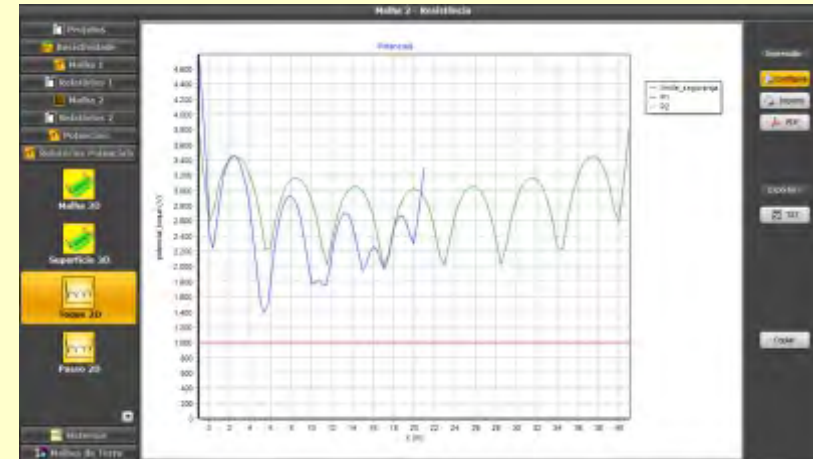


TECAT PLUS 6.5




Software for grounding grid design

NEW! update 6.5 (October 2021)

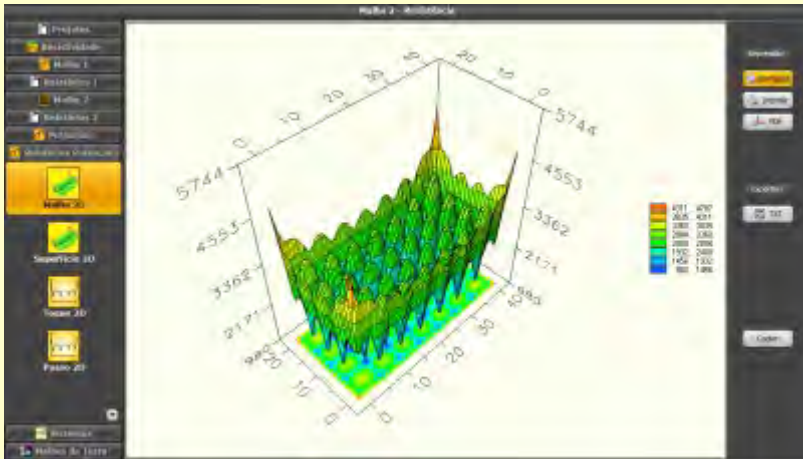

With 27+ years of development, TecAt Plus is the best cost/performance solution on the market for designing grounding grids for any application in 2-, 3- or 4-layer soil.

Exceeding the requirements of any major standard, TecAt Plus also gives you the analysis tools you need to find the optimized solution for your grounding needs.

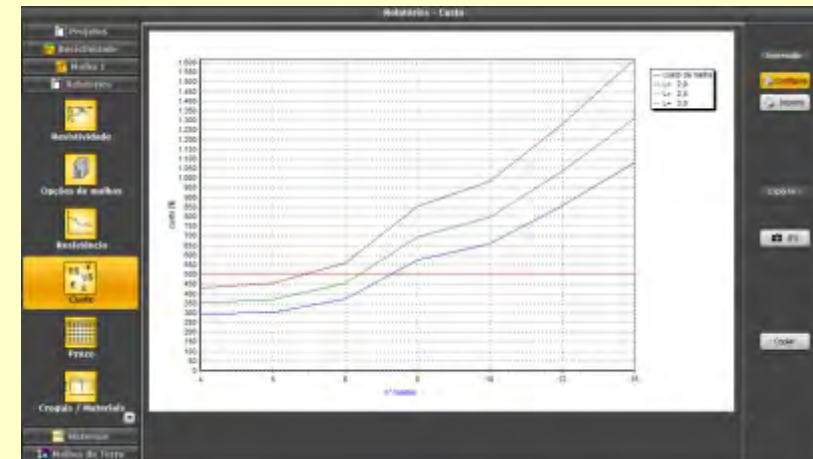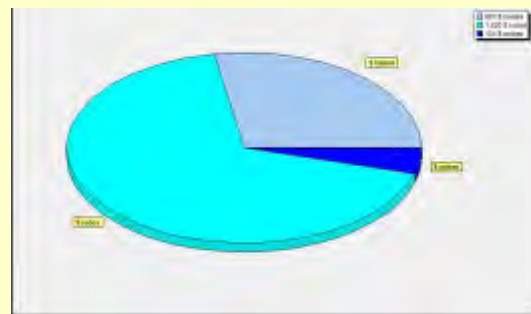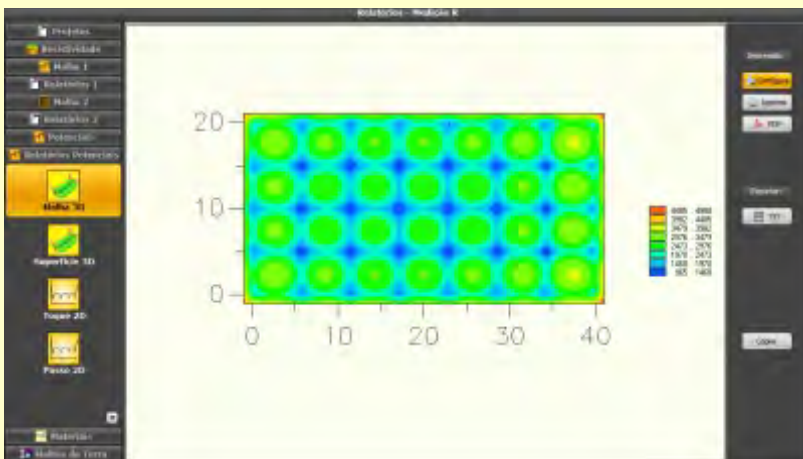

TECAT PLUS 6.5

Software for grounding grid design

TecAt Plus functions:

SOIL RESISTIVITY

- Wenner or Schlumberger
- stratification in 2, 3 or 4 layers

GRID RESISTANCE

- any size complex grids in multi-layer soil
- NEW in version 6.3: import CSV from CAD programs!
- quick comparative of small grids in 2-layer soil

SHORT-CIRCUIT POTENTIALS FOR SUBSTATION GRIDS

- grid and surface potentials in 3D view
- touch, step and surface potentials in 2D view

DESCRIPTIVE, CHARTS AND TABLES REPORTS

- export to PDF, TXT, XLS, CSV and JPG
- print or copy to another program
- materials list, costs of materials and manpower, and time to built

COMPARATIVE CHART ANALYSIS OF SEVERAL GRIDS

INCLUDES DIGITAL EDITION OF OUR BOOK: 'GROUNDING GRIDS'



TECAT PLUS 6.5

Software for grounding grid design

Resistivity - soil data

The screenshot displays the 'Resistividade - Medições' window in TecAt 6.5. The interface includes a sidebar with navigation options like 'Resistividade', 'Configuração', 'Medições', 'Cálculo', and 'Inverso'. The main area shows a data table for soil resistivity measurements and a diagram of a measurement grid.

Resistividade - Medições

Fórmula: completa excluir pontos > % fora da média

Modelo: Wenner Profundidade (h): 0,25 m

Dados em: Resistência

a	A	B	C	D	E	F	G	H	média
1	21,1	21,5	0	0	0	0	0	0	147,1721
2	13,03	13,55	0	0	0	0	0	0	171,4645
4	7,73	7,65	0	0	0	0	0	0	194,5839
8	1,35	1,65	0	0	1,45	0	0	0	74,68769

The diagram shows a grid with points A, B, C, D, E, F, G, H. A measurement axis is indicated between points A and B.

TecAt 6 - Edita Medição

Confirma Cancela

Espacamento: Valores de Resistência

a	A	B	C	D	E	F	G	H
8	1,35	1,65	0	0	1,45	0	0	0

Dados em:

1. é necessário entrar, ao menos, os dados de 3 espaçamentos
2. após entrar os dados da tabela, clique em "Validar"
3. se os dados não estiverem aparecendo é porque faltou digitar em "Abrir" na tela de Projetos.


Using up to 8 measurement axis at a time, TecAt stratifies the soil in 2-, 3- or 4-layer model, with a numerical calculation, without the errors of graphical/manual methods - it not only gives you the best possible result, you can even check the errors of some stratification you got with another method or software!



TECAT PLUS 6.5

Software for grounding grid design

Resistivity - graph report

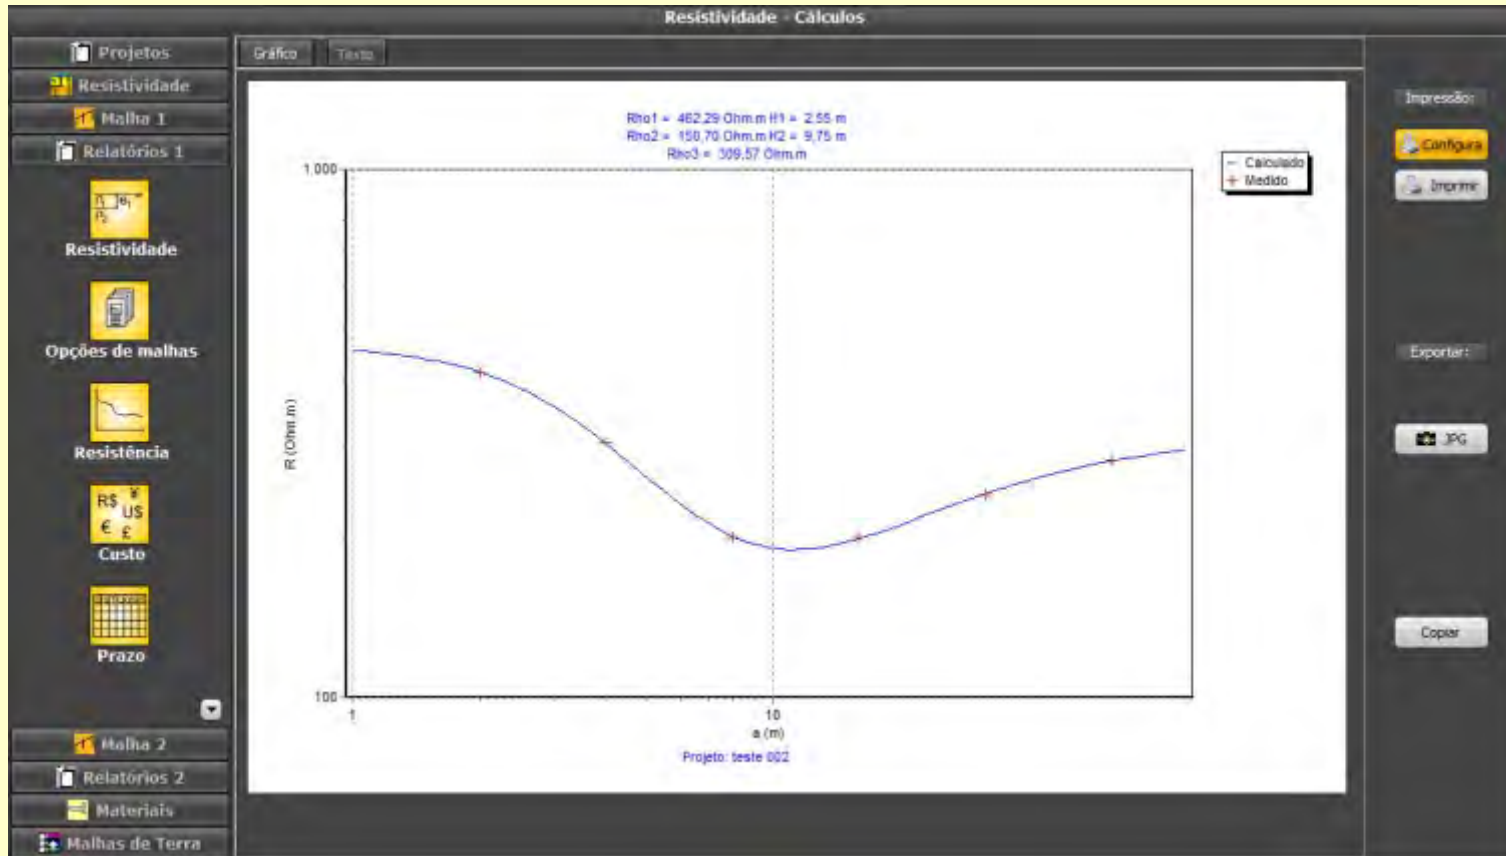

The stratification is then presented on a logarithmic chart and also a text report (see next)



TECAT PLUS 6.5

Software for grounding grid design

Resistivity - text report

The screenshot displays the 'Resistividade - Cálculos' window in the TECAT PLUS 6.5 software. The interface includes a sidebar with navigation options like 'Projetos', 'Resistividade', and 'Relatórios 1'. The main window shows a 'Texto' tab with a report titled 'projeto.configurac'. The report contains a table of data points, a table for soil stratification adjustment, and a diagram of the soil layers.

Seleção	1	2	3	4	5	6	7	8
projeto	0,00	0,00	0,00	0,00	0,00	0,00	0,00	0,00
configuração	0,00	0,00	0,00	0,00	0,00	0,00	0,00	0,00
medições	2,00	0,00	0,00	0,00	0,00	0,00	0,00	0,00
resultados	7,00	0,00	0,00	0,00	0,00	0,00	0,00	0,00
diagrama								

camada #1: 462,29 [Ohm.m] x 2,55 [m]
camada #2: 150,7 [Ohm.m] x 9,75 [m]
camada #3: 309,57 [Ohm.m] x

Ajuste da Estratificação da Resistividade do Solo:

espaçamento [m]	medida [Ohm.m]	calculada [Ohm.m]	desvio %
2,00	412,86	413,36	-0,12
4,00	303,64	302,83	0,27
8,00	201,41	202,17	-0,38
16,00	201,15	199,81	0,66
32,00	241,30	243,14	-0,76
64,00	281,69	280,52	0,35

erro RMS = 0 %

Diagrama:

R	H
R1= 462.29	H1= 2.55
R2= 150.70	H2= 12.30
R3= 309.57	H3= Inf.

Select the data you want at the report, including deviations for each point and RMS of the whole set, proportioning full certainty of the adjustment between field data and calculated curve.



TECAT PLUS 6.5

Software for grounding grid design

Grid 2 module: complex grids

Eletrodo nº	X1	Y1	Z1	X2	Y2	Z2	Raio	Descrição	Tipo
			[m]						
			[mm]						obs:
1	0	0	0,5	40	0	0,5	4	cabo cobre 50 mm ²	
2	0	4	0,5	40	4	0,5	4	cabo cobre 50 mm ²	
3	0	8	0,5	40	8	0,5	4	cabo cobre 50 mm ²	
4	0	12	0,5	40	12	0,5	4	cabo cobre 50 mm ²	
5	0	16	0,5	40	16	0,5	4	cabo cobre 50 mm ²	
6	0	20	0,5	40	20	0,5	4	cabo cobre 50 mm ²	
7	0	0	0,5	0	20	0,5	4	cabo cobre 50 mm ²	
8	5	0	0,5	5	20	0,5	4	cabo cobre 50 mm ²	
9	10	0	0,5	10	20	0,5	4	cabo cobre 50 mm ²	
10	15	0	0,5	15	20	0,5	4	cabo cobre 50 mm ²	
11	20	0	0,5	20	20	0,5	4	cabo cobre 50 mm ²	
12	25	0	0,5	25	20	0,5	4	cabo cobre 50 mm ²	
13	30	0	0,5	30	20	0,5	4	cabo cobre 50 mm ²	
14	35	0	0,5	35	20	0,5	4	cabo cobre 50 mm ²	
15	40	0	0,5	40	20	0,5	4	cabo cobre 50 mm ²	
16	0	0	0,5	0	0	3,5	8	aço cobreado 3 m x 5/8	
17	40	0	0,5	40	0	3,5	8	aço cobreado 3 m x 5/8	
18	0	4	0,5	0	4	3,5	8	aço cobreado 3 m x 5/8	
19	40	4	0,5	40	4	3,5	8	aço cobreado 3 m x 5/8	
20	0	8	0,5	0	8	3,5	8	aço cobreado 3 m x 5/8	
21	40	8	0,5	40	8	3,5	8	aço cobreado 3 m x 5/8	
22	0	12	0,5	0	12	3,5	8	aço cobreado 3 m x 5/8	
23	40	12	0,5	40	12	3,5	8	aço cobreado 3 m x 5/8	
24	0	16	0,5	0	16	3,5	8	aço cobreado 3 m x 5/8	


Grid 2 module for complex grids, substations: you can enter each electrode or use the 'wizards' for automatic generation; new: import existing grid on a CAD program using CSV file!



TECAT PLUS 6.5

Software for grounding grid design

Grid 2 'wizards'

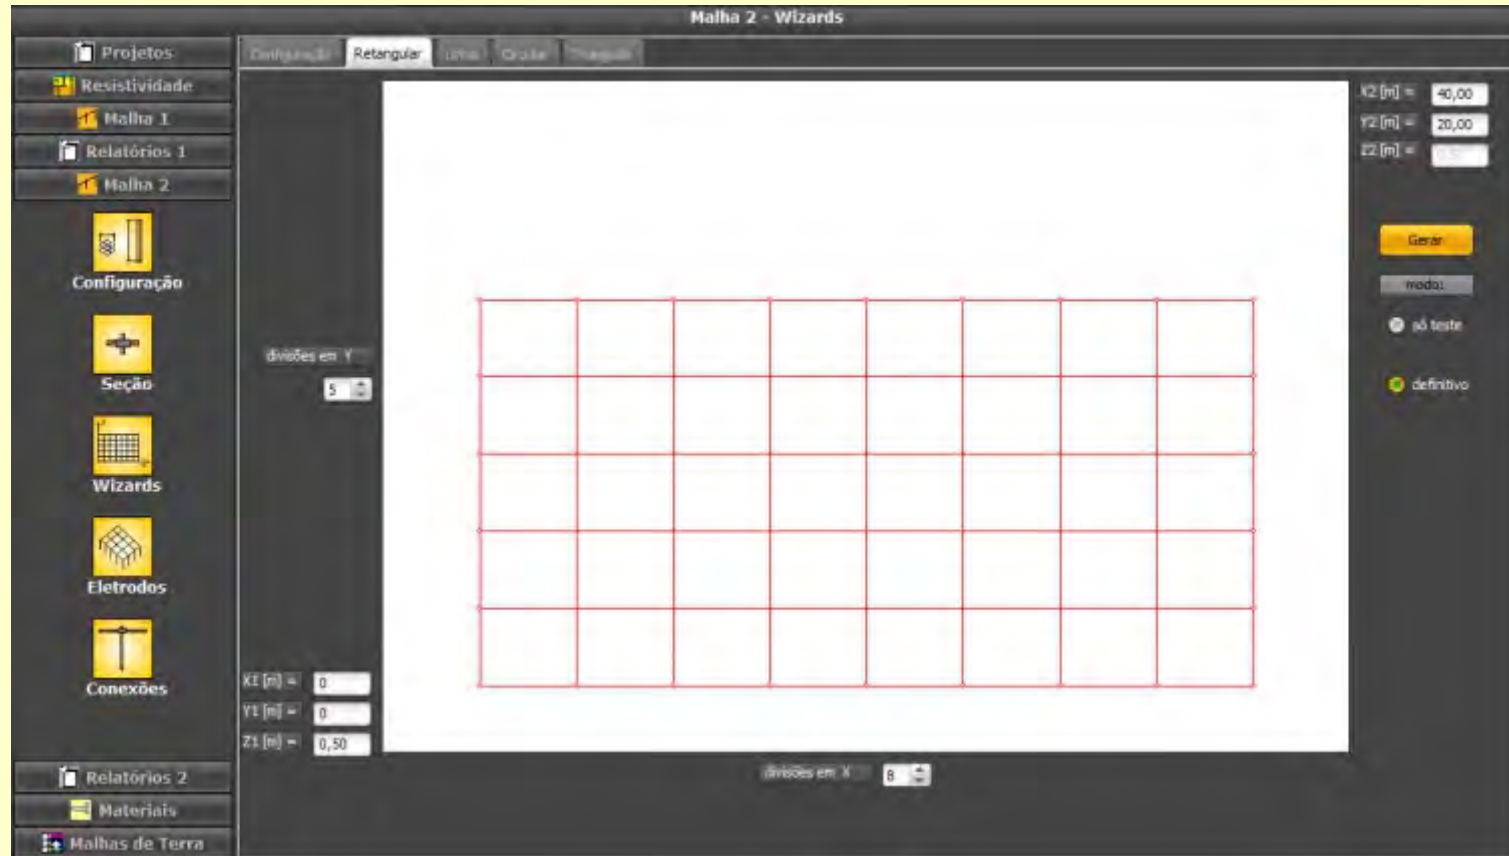


With TecAt 'wizards' you can generate automatically each regular portion of the grid; there are wizards for rectangular, linear, circular (poligon) and triangular portions, and the rectangular can have linear or geometric distance between cable lines (and its rods). You can build complex designs instantly!




TECAT PLUS 6.5

Software for grounding grid design

New Wizards for version 6.5: Polygon, Wind Turbine and Photovoltaic:

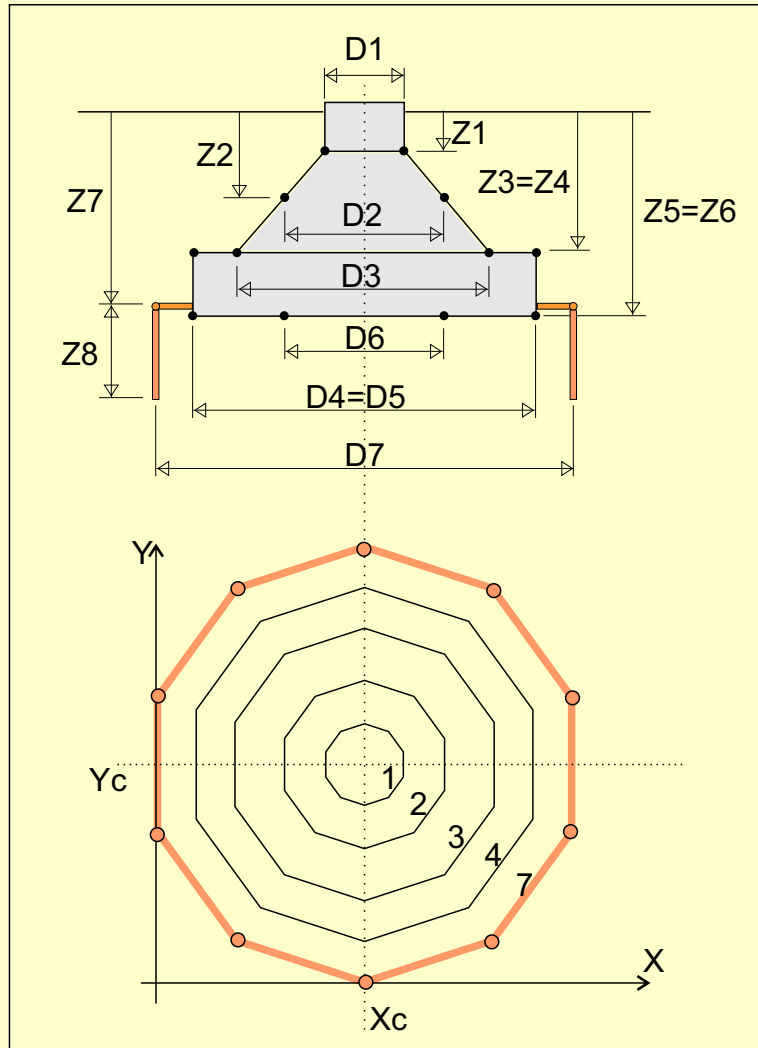

the new TecAt 6.5 also has new wizards to generate the grids for the new applications of wind and solar!

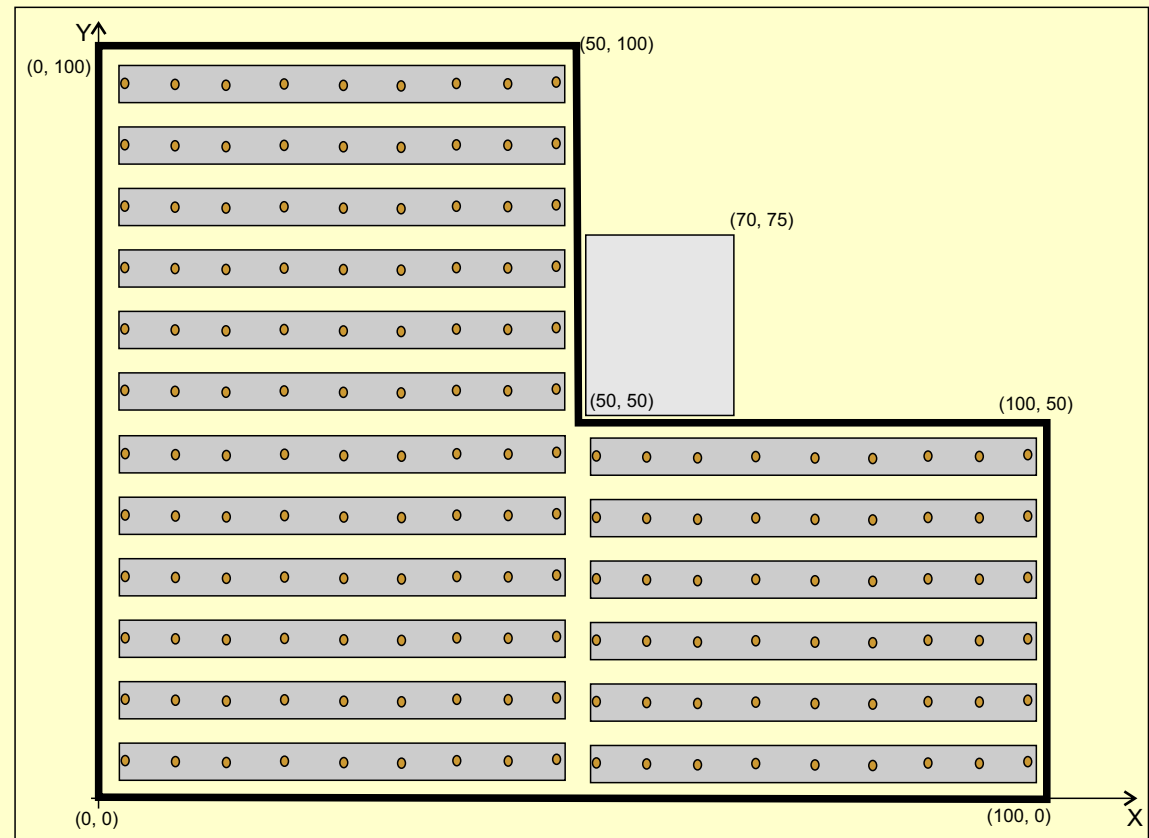

TECAT PLUS 6.5

Software for grounding grid design

Resistance report

Malha 2 - Eletrodos

Resistência da malha [Ohm]: 3,78 Corrente de folha [kA]: 0,00 Máximo potencial da malha [V]: 3783,47 incluir subdivisões

Dados do Projeto:
Projeto: teste 002
Cliente:
Data: 04/08/2014
Local:

Nº de camadas: 3
camada #1: 462,29 [Ohm.m] x 2,55 [m]
camada #2: 150,7 [Ohm.m] x 9,75 [m]
camada #3: 309,57 [Ohm.m] x

Resistência da Malha [Ohm] = 3,78
Máximo potencial da Malha [V] = 3783,47

condutores:

Nr.	X1 (m)	Y1 (m)	Z1 (m)	X2 (m)	Y2 (m)	Z2 (m)	Raio (mm)	HSub	Tipo
cabos									
1	0,0	0,0	0,5	40,0	0,0	0,5	4,0	9	A
2	0,0	4,0	0,5	40,0	4,0	0,5	4,0	9	A
3	0,0	8,0	0,5	40,0	8,0	0,5	4,0	9	A
4	0,0	12,0	0,5	40,0	12,0	0,5	4,0	9	A
5	0,0	16,0	0,5	40,0	16,0	0,5	4,0	9	A
6	0,0	20,0	0,5	40,0	20,0	0,5	4,0	9	A
7	0,0	0,0	0,5	0,0	20,0	0,5	4,0	6	A
8	5,0	0,0	0,5	5,0	20,0	0,5	4,0	6	A
9	10,0	0,0	0,5	10,0	20,0	0,5	4,0	6	A
10	15,0	0,0	0,5	15,0	20,0	0,5	4,0	6	A
11	20,0	0,0	0,5	20,0	20,0	0,5	4,0	6	A
12	25,0	0,0	0,5	25,0	20,0	0,5	4,0	6	A
13	30,0	0,0	0,5	30,0	20,0	0,5	4,0	6	A
14	35,0	0,0	0,5	35,0	20,0	0,5	4,0	6	A

Text report with the resistance calculated and all the electrodes - you can also list the electrodes as divided for the calculations (for better precision)



TECAT PLUS 6.5

Software for grounding grid design

Connections report

Conexão	X	Y	Z	Cond 1	Cond 2	Dim 1	Dim 2	Forma	Tipo	Descrição
n°	[m]			n°	[mm] ou [mm²]	obs:	obs:			material
70	0	0	0,5	1	7	8	0	4	1	molde solda CC 50x50 mm²
71	5	0	0,5	1	8	8	0	1	1	molde solda T 50x50 mm²
72	10	0	0,5	1	9	8	0	1	1	molde solda T 50x50 mm²
73	15	0	0,5	1	10	8	0	1	1	molde solda T 50x50 mm²
74	20	0	0,5	1	11	8	0	1	1	molde solda T 50x50 mm²
75	25	0	0,5	1	12	8	0	1	1	molde solda T 50x50 mm²
76	30	0	0,5	1	13	8	0	1	1	molde solda T 50x50 mm²
77	35	0	0,5	1	14	8	0	1	1	molde solda T 50x50 mm²
78	40	0	0,5	1	15	8	0	4	1	molde solda CC 50x50 mm²
79	0	0	0,5	1	16	8	0	2	1	molde solda CH 50 mm² x 5/
80	40	0	0,5	1	17	8	0	2	1	molde solda CH 50 mm² x 5/
81	5	0	0,5	1	28	8	0	2	1	molde solda CH 50 mm² x 5/
82	10	0	0,5	1	30	8	0	2	1	molde solda CH 50 mm² x 5/
83	15	0	0,5	1	32	8	0	2	1	molde solda CH 50 mm² x 5/
84	20	0	0,5	1	34	8	0	2	1	molde solda CH 50 mm² x 5/
85	25	0	0,5	1	36	8	0	2	1	molde solda CH 50 mm² x 5/
86	30	0	0,5	1	38	8	0	2	1	molde solda CH 50 mm² x 5/
87	35	0	0,5	1	40	8	0	2	1	molde solda CH 50 mm² x 5/
88	0	4	0,5	2	7	8	0	1	1	molde solda T 50x50 mm²
89	5	4	0,5	2	8	8	0	0	1	molde solda X 50x50 mm²
90	10	4	0,5	2	9	8	0	0	1	molde solda X 50x50 mm²
91	15	4	0,5	2	10	8	0	0	1	molde solda X 50x50 mm²
92	20	4	0,5	2	11	8	0	0	1	molde solda X 50x50 mm²


TecAt automatically locates every electrodes junctions of the grid and, using the selected components from the material database, builds the full list of connections



TECAT PLUS 6.5

Software for grounding grid design

Potentials module: defining the area

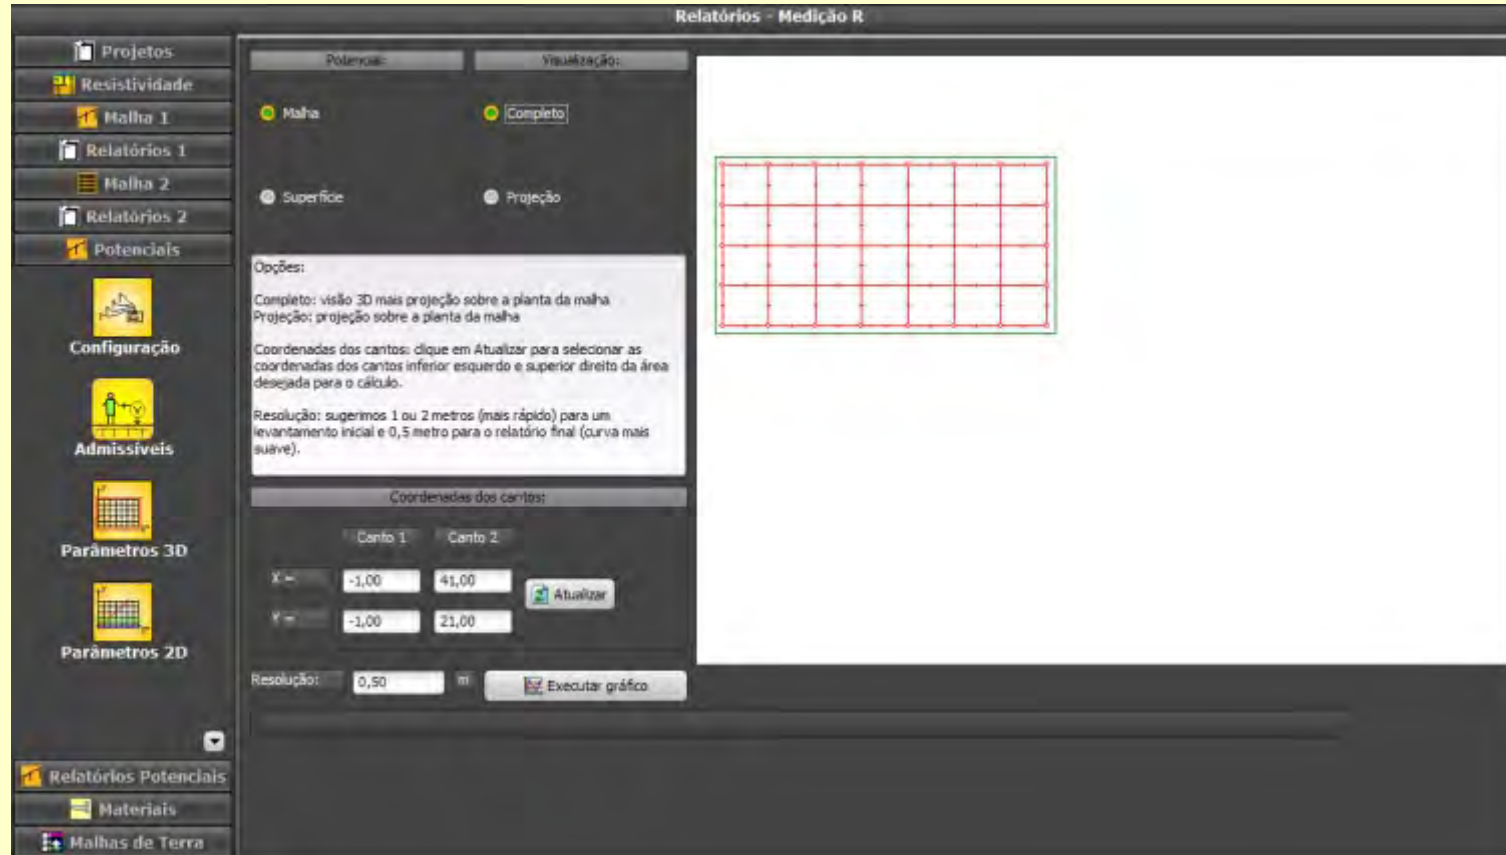


For the 3-D view of grid and surface potentials, you can set the desired area - the full grid, part of it or the surrounding area.




TECAT PLUS 6.5

Software for grounding grid design

Potentials module: 3-D view

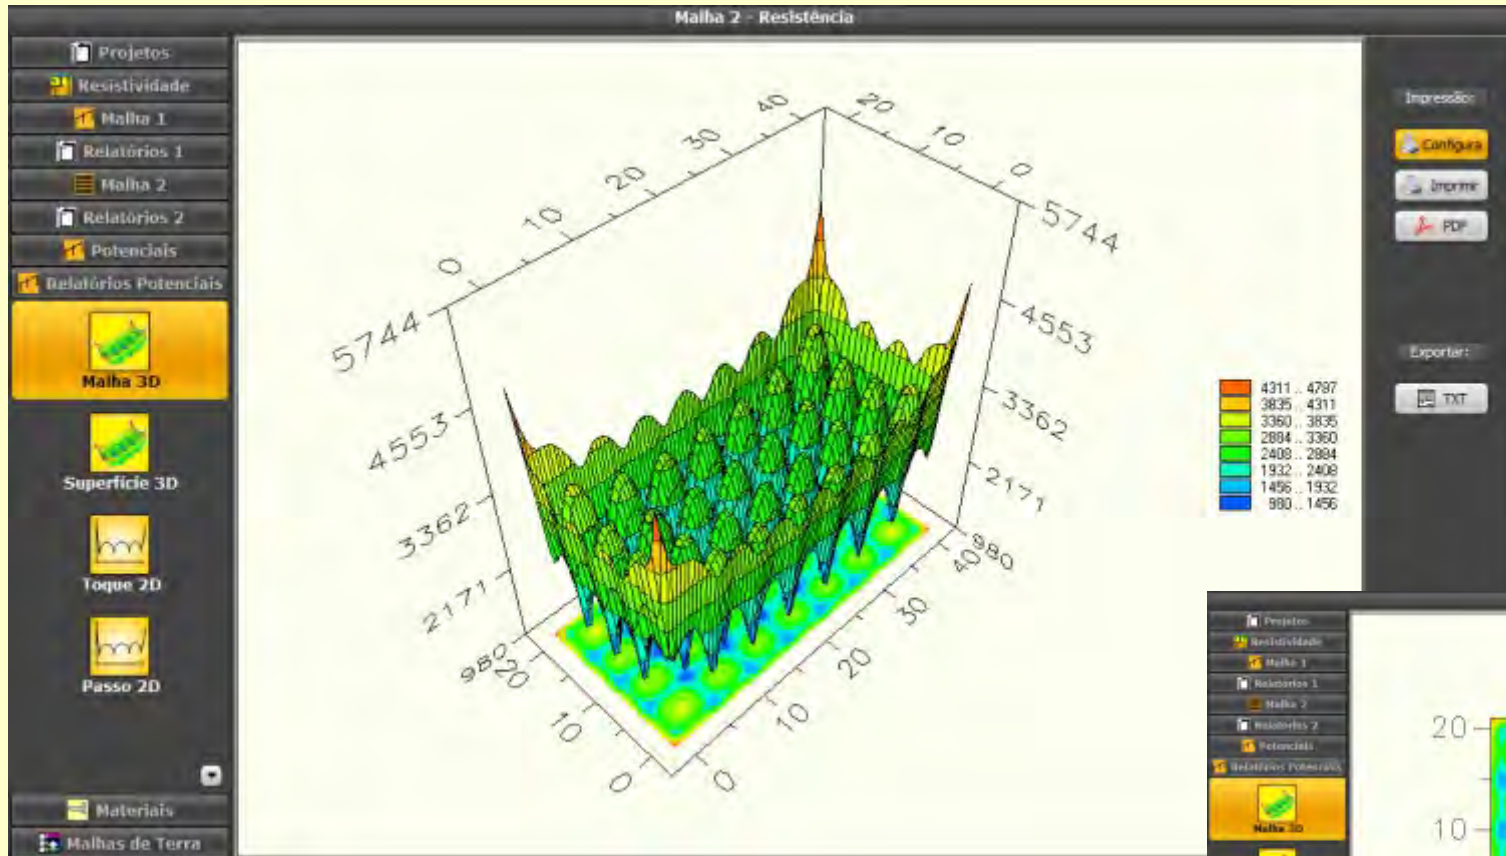

You can also set the chart resolution to get a better speed while defining the grid, then draw it again with a more smooth surface

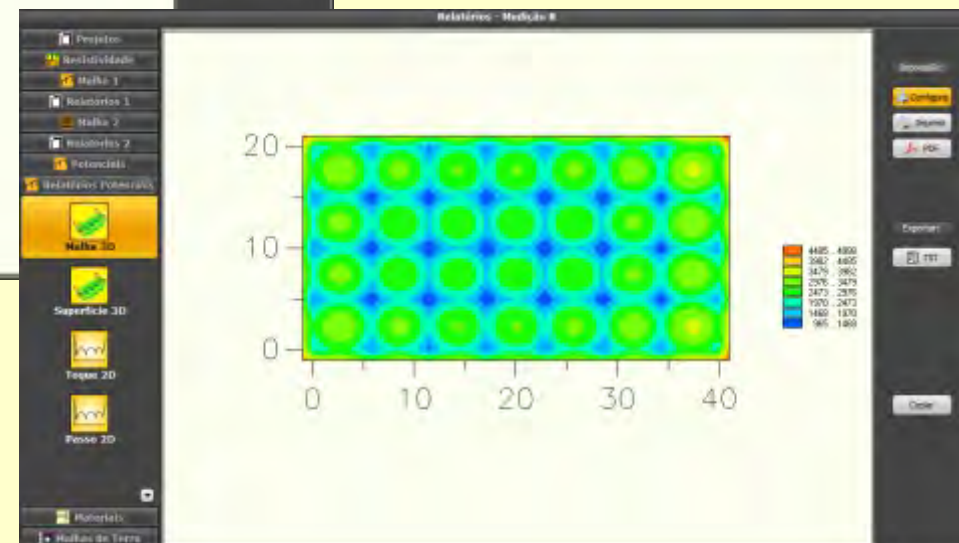

TECAT PLUS 6.5

Software for grounding grid design

Potentials module: 2-D view

The screenshot shows the 'Relatórios - Medição R' window in the Potentials module. The interface is divided into several sections:

- Sidebar:** Contains navigation icons for 'Projetos', 'Resistividade', 'Malha 1', 'Relatórios 1', 'Malha 2', 'Relatórios 2', 'Potenciais', 'Configuração', 'Admissíveis', 'Parâmetros 3D', 'Parâmetros 2D', 'Relatórios Potenciais', 'Materiais', and 'Malhas de Terra'.
- Potencial:** A sub-panel with three radio buttons: 'Toque' (selected), 'Passo', and 'Superfície'.
- Opções:** A text area providing instructions for each option:
 - Toque: perfil dos potenciais de toque ao longo das linhas (vide abaixo)
 - Passo: idem, potenciais de passo
 - Superfície: idem, potenciais na superfície em relação a um terra remoto
- Coordenadas de corte:** A table for defining cut coordinates:

Coordenadas de corte:	
-1	-1
-1	2,5
21	41
21	2,5

Below the table is an 'Atualizar' button. At the bottom left, there is a 'Resolução:' field set to '0,50' and an 'Executar Gráfico' button. The main window displays a 2D grid with a diagonal line, representing the potential distribution.


For the 2-D view of touch, step and surface potentials, you can set up to 3 lines at a time, including coordinates outside the grid; as in the 3-D view, you can also set the chart resolution



TECAT PLUS 6.5

Software for grounding grid design

Potentials module: 2-D view

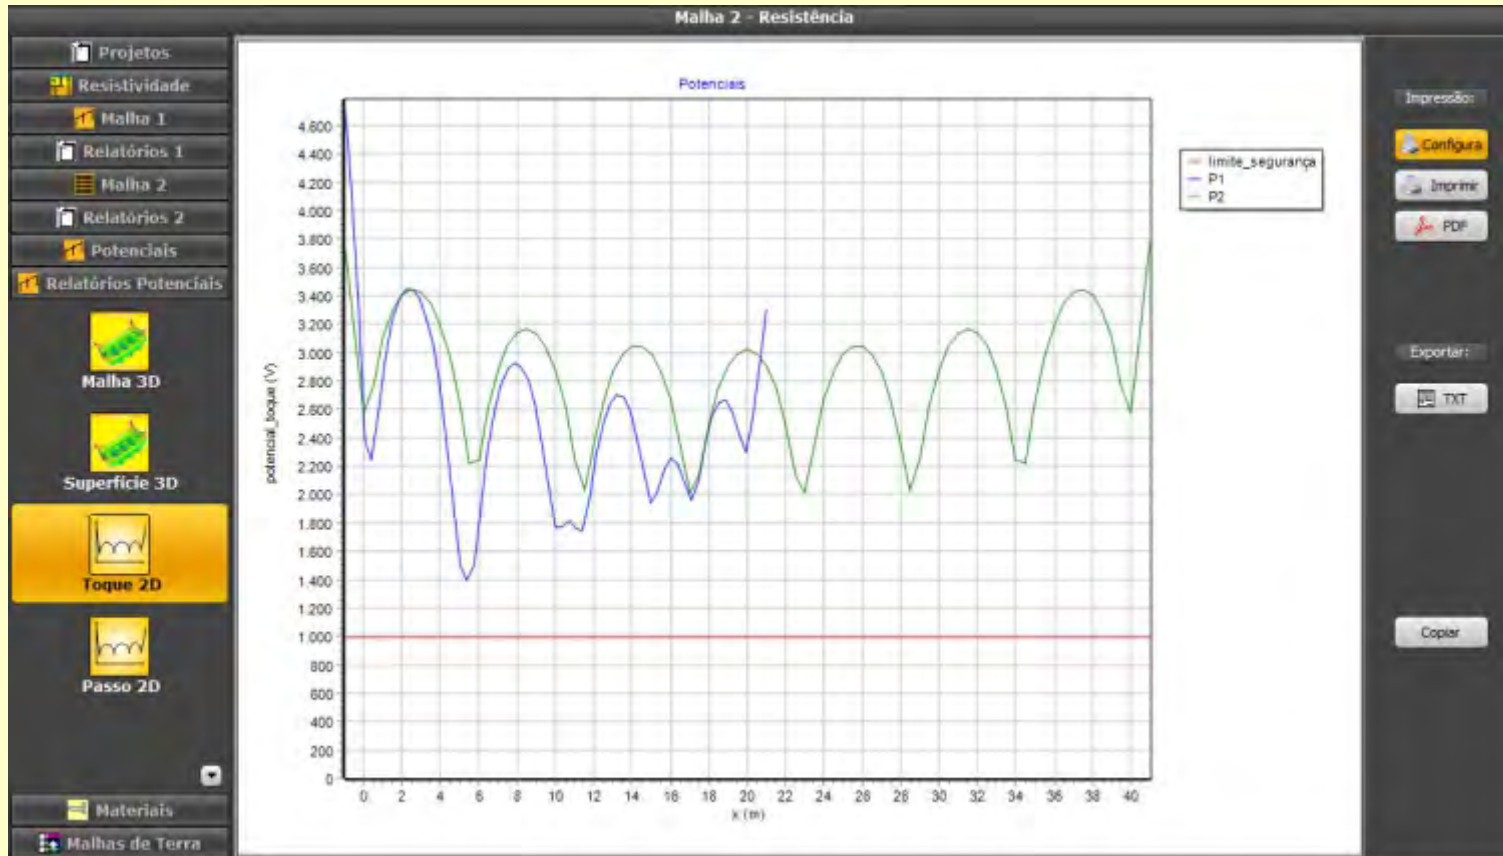


At the 2-D view of touch, step and surface potentials, the potentials along each defined line is plotted, along with the tolerable touch/step potential (calculated separately - see next); for the surface potentials, the red line represents the GPR



TECAT PLUS 6.5

Software for grounding grid design

Resistance measurement simulation

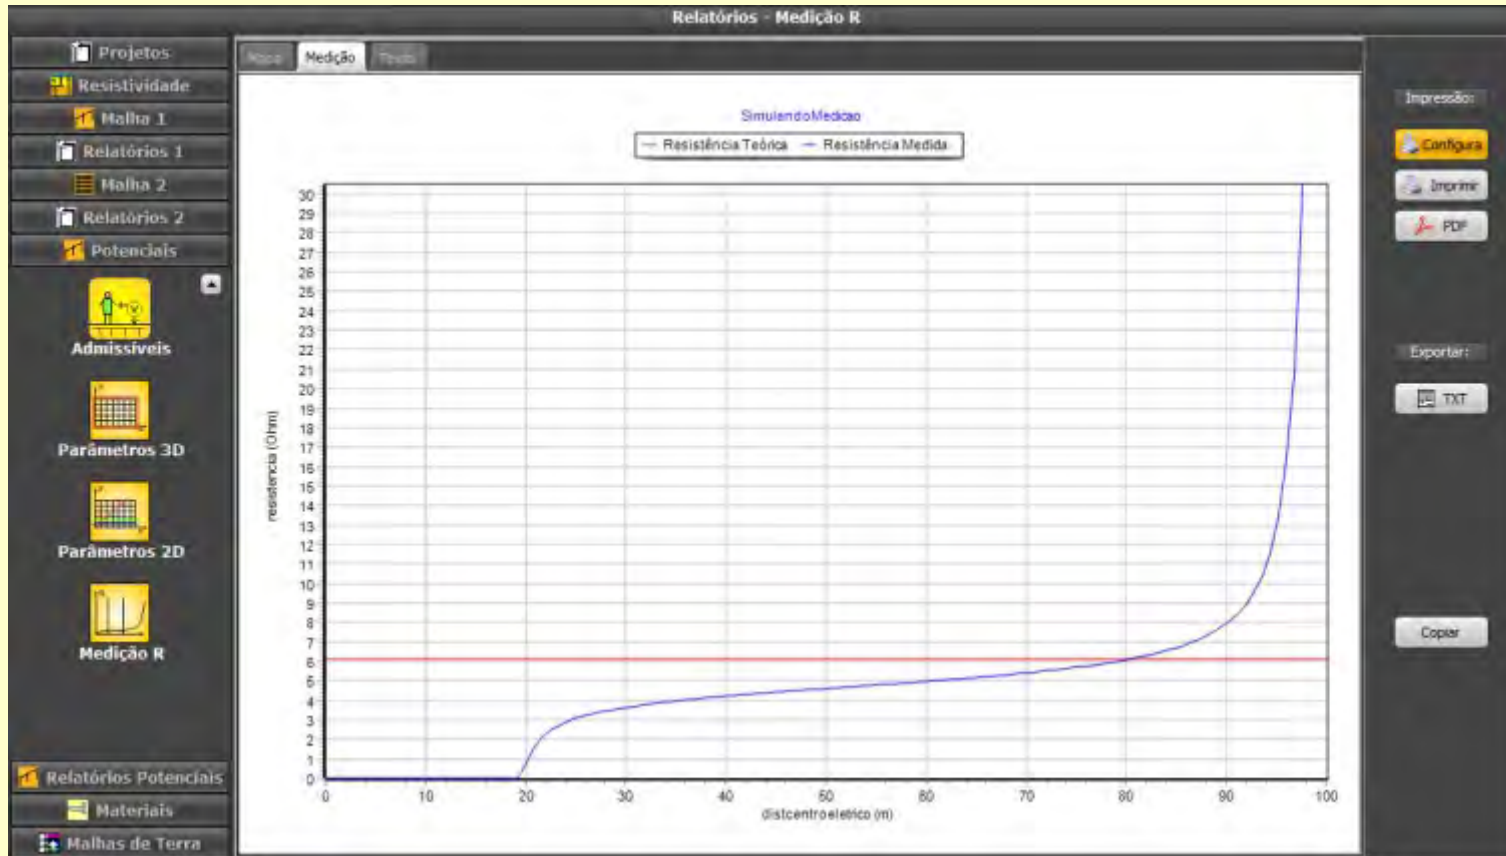


An additional feature of TecAt is the possibility to simulate the resistance measurement after the grid is built on the given soil; that's very handy when you don't have enough space to perform a full measurement



TECAT PLUS 6.5

Software for grounding grid design

Auxiliary calculations

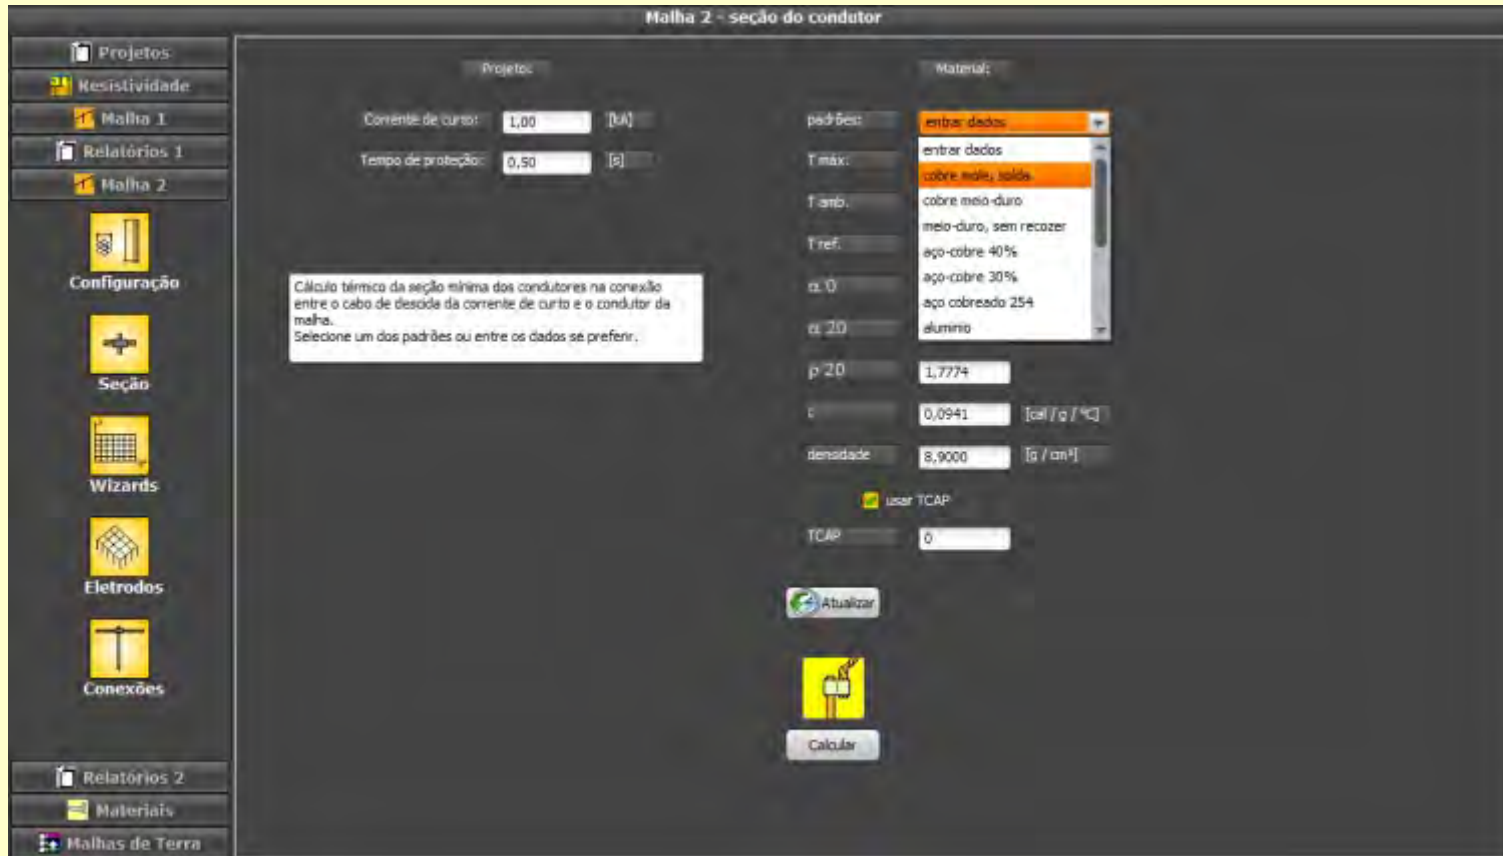

TecAt also has calculations for the conductor section and tolerable potentials (voltages); for conductor section, there are all the standard predefined materials or you can enter your own parameters; for tolerable touch and step potentials, TecAt uses the IEEE-80 formulation (you'll need the grid current and the short-circuit duration)



TECAT PLUS 6.5

Software for grounding grid design

Grid 1 module: quick grid comparative

The screenshot shows the 'Malha 1 - Pequena' module in the TECAT PLUS 6.5 software. The interface includes a sidebar with navigation options: 'Projeto', 'Resistividade', 'Malha 1', 'Configuração', 'Pontual', 'Pequena', 'Edifício', 'Torre', 'Circular', 'Relatórios', 'Materiais', and 'Malhas de Terra'. The main area displays a diagram of a grounding grid configuration with dimensions labeled: 'h' (height), 'b' (width), 'c' (length), 'e' (depth), and soil resistivity layers ρ_1 and ρ_2 . A 'Calcular' button is visible.


Besides the complex grid calculations in up to 4-layer soil on module Grid 2, the module Grid 1 gives you quick comparatives in 2-layer soil for several predefined configurations, like rectangular or circular (poligon) rings with up to 16 rods, with 3 rod lengths



TECAT PLUS 6.5

Software for grounding grid design

Grid 1 module: quick grid comparative

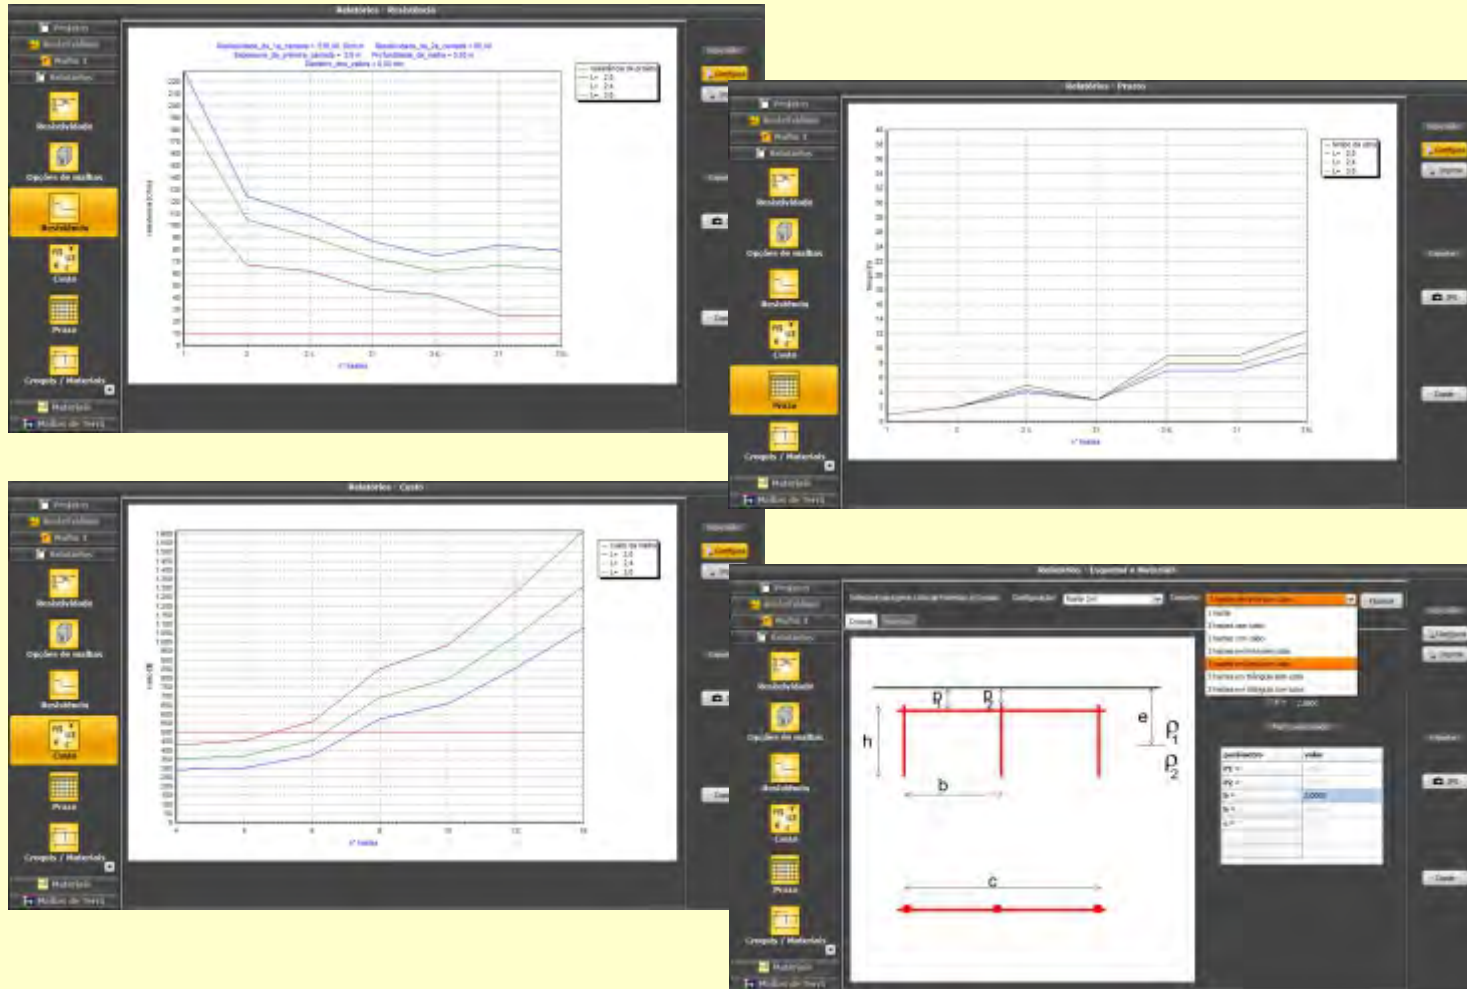

On the Grid 1 module, TecAt calculates instantly 21 different grids with the same configuration but different sizes, presenting comparative charts of resistance, cost and time to build; after you select the best solution for your case, you can generate its descriptive (with draft) and materials reports



TECAT PLUS 6.5


Software for grounding grid design

Materials database

Materials - Consulta

Ordenar: Descrição Procurar:

Descrição	Grupo	Dimensões	Característica 01
aço cobreado 2.0 m x 3/4"	Hastes	2 m x 3/4"	aço cobreado
aço cobreado 2.0 m x 5/8"	Hastes	2 m x 5/8"	aço cobreado
aço cobreado 2.4 m x 3/4"	Hastes	2.4 m x 3/4"	aço cobreado
aço cobreado 2.4 m x 5/8"	Hastes	2.4 m x 5/8"	aço cobreado
aço cobreado 3 m x 3/4"	Hastes	3 m x 3/4"	aço cobreado
aço cobreado 3 m x 5/8"	Hastes	3 m x 5/8"	aço cobreado
Brita	Brita	#3	
cabo cobre 50 mm ²	Cabos	50 mm ²	
cabo cobre 70 mm ²	Cabos	70 mm ²	cobre eletrolítico
Compressão C 50 mm ²	Conectores	50 x 50 mm ²	
Compressão C 70 mm ²	Conectores	70 x 70 mm ²	
Compressão duplo G 50 mm ²	Conectores	50 x 50 mm ²	
Compressão duplo G 70 mm ²	Conectores	70 x 70 mm ²	
Compressão G 50 mm ² x 5/8"	Conectores	50 mm ² x 5/8"	
Compressão G 70 mm ² x 3/4"	Conectores	70 mm ² x 3/4"	
Linha rosca 3/4"	Conectores	3/4 x 3/4"	

Foto ou crop. #1: 

Comentários:

Novo Copia p/ novo Editar Deletar

Malhas de Terra


TecAt has a database of materials and suppliers - it's fully editable and you can generate the data-sheet for each material.



TECAT PLUS 6.5

Software for grounding grid design

Documentation

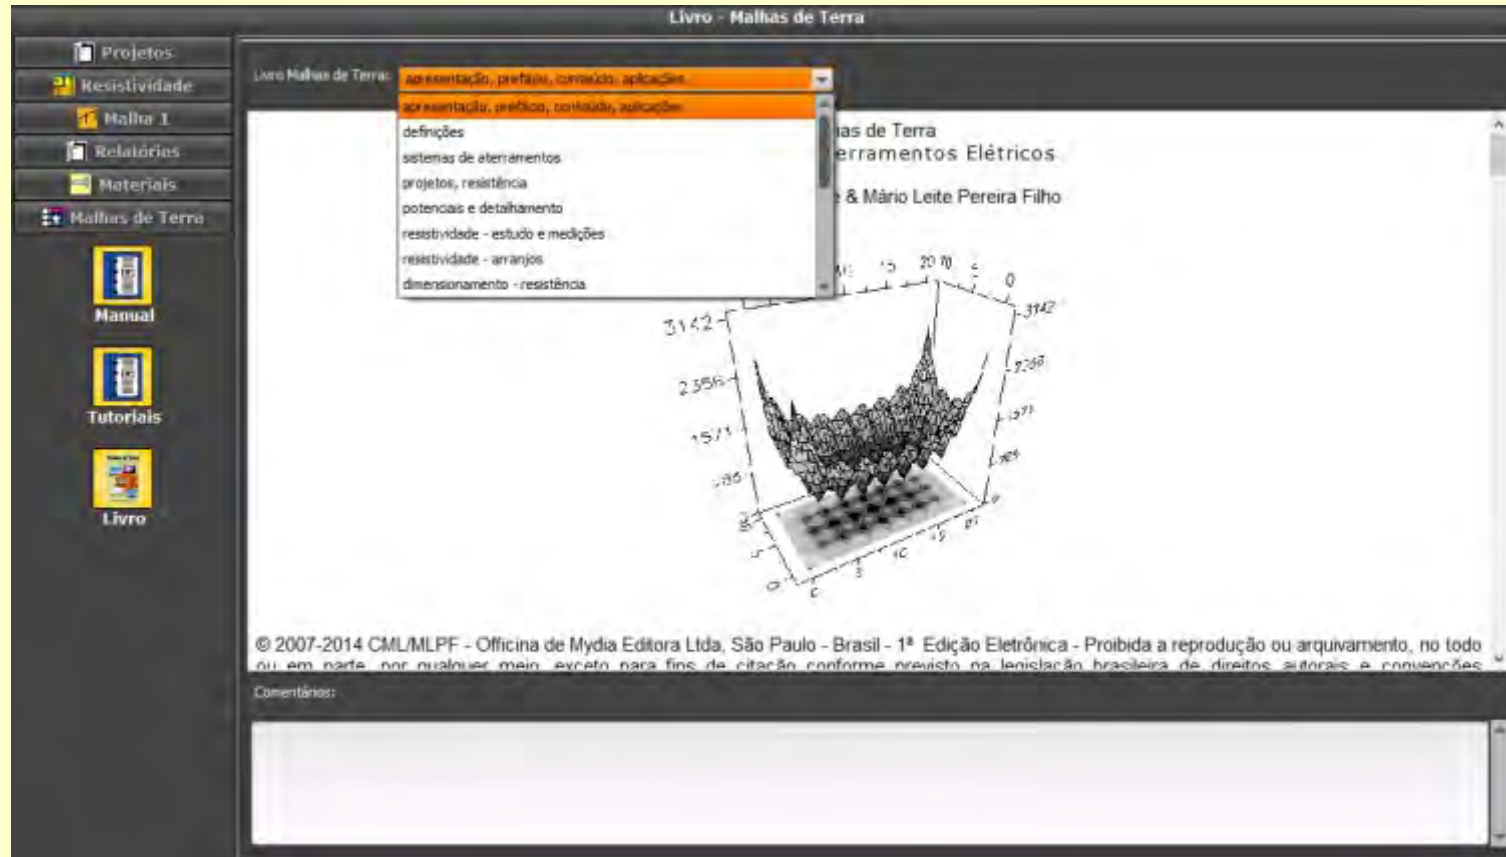

From inside the program, you have access to the manual, some tutorials (more tutorials available at our site) and the book 'Malhas de Terra' (Grounding Grids) with all the theory - as we are revising the text and the book structure, it's not translated to English yet, we hope to finish this as soon as possible (honest!) and, of course, all users will receive this update.



ANY MAJOR STANDARD	IEEE 80, IEEE 81, NBR 7117, NBR
MULTI-LANGUAGE	English; Português, Español
MULTI-USER	mono-user version multi-user: 2 users or more on the same network
SOIL STRATIFICATION	Wenner and Schlumberger ³¹ methods fully numerical calculation generates 2-, 3- and 4-layer stratification
GRID RESISTANCE	Full no-excuses numerical computation Grid in 2-, 3- or 4-layer soil Any grid format, any size electrodes
TOUCH, STEP AND SURFACE POTENTIALS	Full no-excuses numerical computation Grid in 2-, 3- or 4-layer soil 2-D and 3-D view
MATERIALS LIST	Materials database (fully editable) Detailed and consolidated lists Data-sheet for each component
QUICK 2-LAYER OPTION	Several pre-defined models Instantaneous calculation and analysis 21 grids resistance compare
REPORTS in PDF format	Export to PDF All reports (texts, charts) can be copied to paste on another software

For technical details or enquiries:

Your contact:

sales@alightningconsultant.com

+33 975889664

